



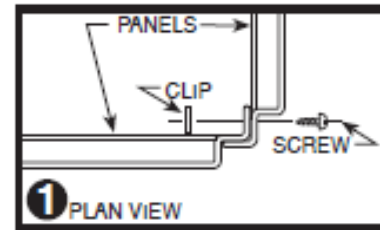


# 4'x4' VERSA BLYND ASSEMBLY INSTRUCTIONS

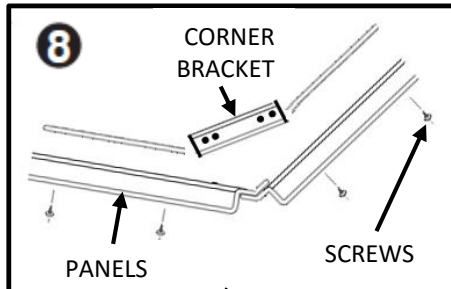


**NOTE:** When securing walls, start with the top screw and work downward. Be sure not to over torque screws and clips.

**NOTE:** Windows are pre-bent to insure stability in window track.

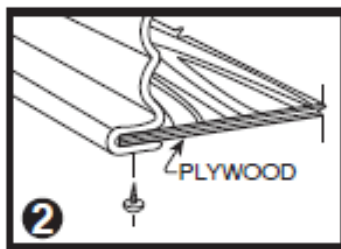

**NOTE:** Door comes installed. Shown off for clarity of other assemblies.

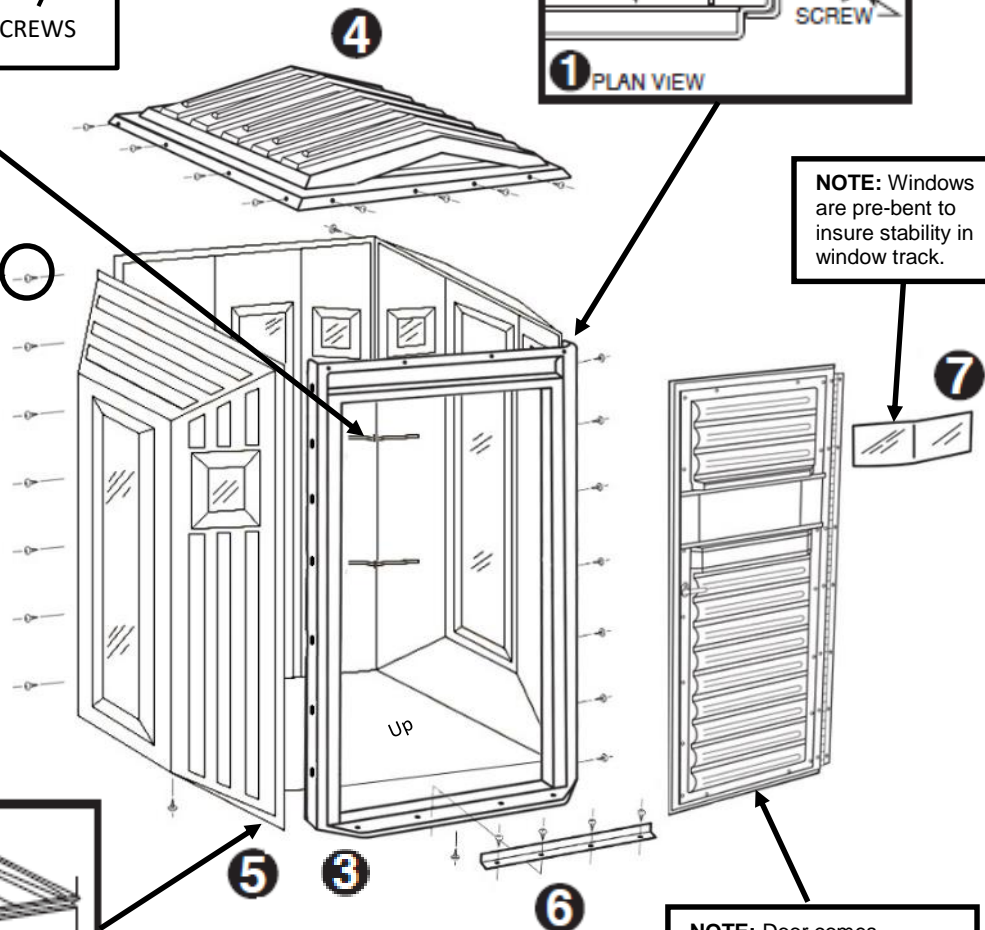

*a product of*

**PLASTIC VACUUM FORMING, INC.**

12103 Radium Dr. • San Antonio • Texas • 78216 • 210-344-8531 • 1-800-458-0263

**HELPFUL HINT:**

It is recommended that you have an assistant help you with the assembly of the Bow Blynd.

---

**NOTE:**

Anchoring system is owner's responsibility.

Plastic Vacuum Forming, Inc. assumes no liability for injury or damage to persons or property resulting from the use of its products or services. The products that we sell must be assembled, installed, anchored and used with care, caution, and common sense.

Please read all instructions before starting assembly.

---

**RECOMMENDED TOOLS:**

Cordless drill

Phillips Head Bit

---

**BOXED:**

Assembly instructions & Item Listing Sheet

(1) Door panel with full size door	(1) Door window
(3) Side walls	(1) Package screws & clips
(1) 4' x 4' roof	(1) Aluminum bottom door stop
(1) 4' x 4' plywood floor	(4) Wall support brackets

---

**INSTRUCTIONS:**

1. Place back panel between helper or a stable object. Overlap corner panels as shown and secure each side panel to back panel with seven screws and clips.
2. Slide plywood into bottom of back and side panel slots. **NOTE:** Plywood must be positioned with side marked "UP" as shown. Extend the life of the floor with an exterior oil based paint or waterseal product.
3. Slide front panel into position and secure to sides.
4. Position roof over wall flanges. From inside, push upper panel against roof flange and secure each side with screws and clips.
5. Turn the Bow Blynd on its side and secure the plastic flanges to the plywood floor. See illustration 2.
6. Line up door stop and secure to floor flange, as shown, with flange turned outward.
7. Install Bow Blynd window with bent side facing out.
8. Install wall support corner brackets with existing holes in back corners.

**NOTE:** Floor handle only comes with a Tower Kit. To assemble use holes provided in floor to locate and install handle. Use two 1/4"-20x1-1/4" hex capscrews, 5/16" fender washers, and 1/4"-20 hex nuts to secure.

Plastic Vacuum Forming, Inc. assumes no liability for injury or damage to persons or property resulting from the use of its products or services. The products that we sell must be assembled, installed, anchored and used with care, caution, and common sense.

**Please read all instructions before starting assembly.**

**DOWNLOAD AT [WWW.BLYND.COM](http://WWW.BLYND.COM)**